
Location of components

1	*Antenna*
F1	*Fuse and relay module*
F1k15	*CL rear door unlocking relay*
F1k20	*CL all door locking relay*
F1k23	*CL front right front door and rear door unlocking relay*
F1k24	*CL front left front door and tank flap unlocking relay*
M14/5	*Right front door CL actuating motor*
M14/6	*Left front door CL actuating motor*
M14/7	*Tailgate CL actuating motor*
M14/8	*Left rear door CL actuating motor*
M14/9	*Right rear door CL actuating motor*
M14/10	*Filler flap CL actuating motor*
N10	*All-activity module (AAM)*

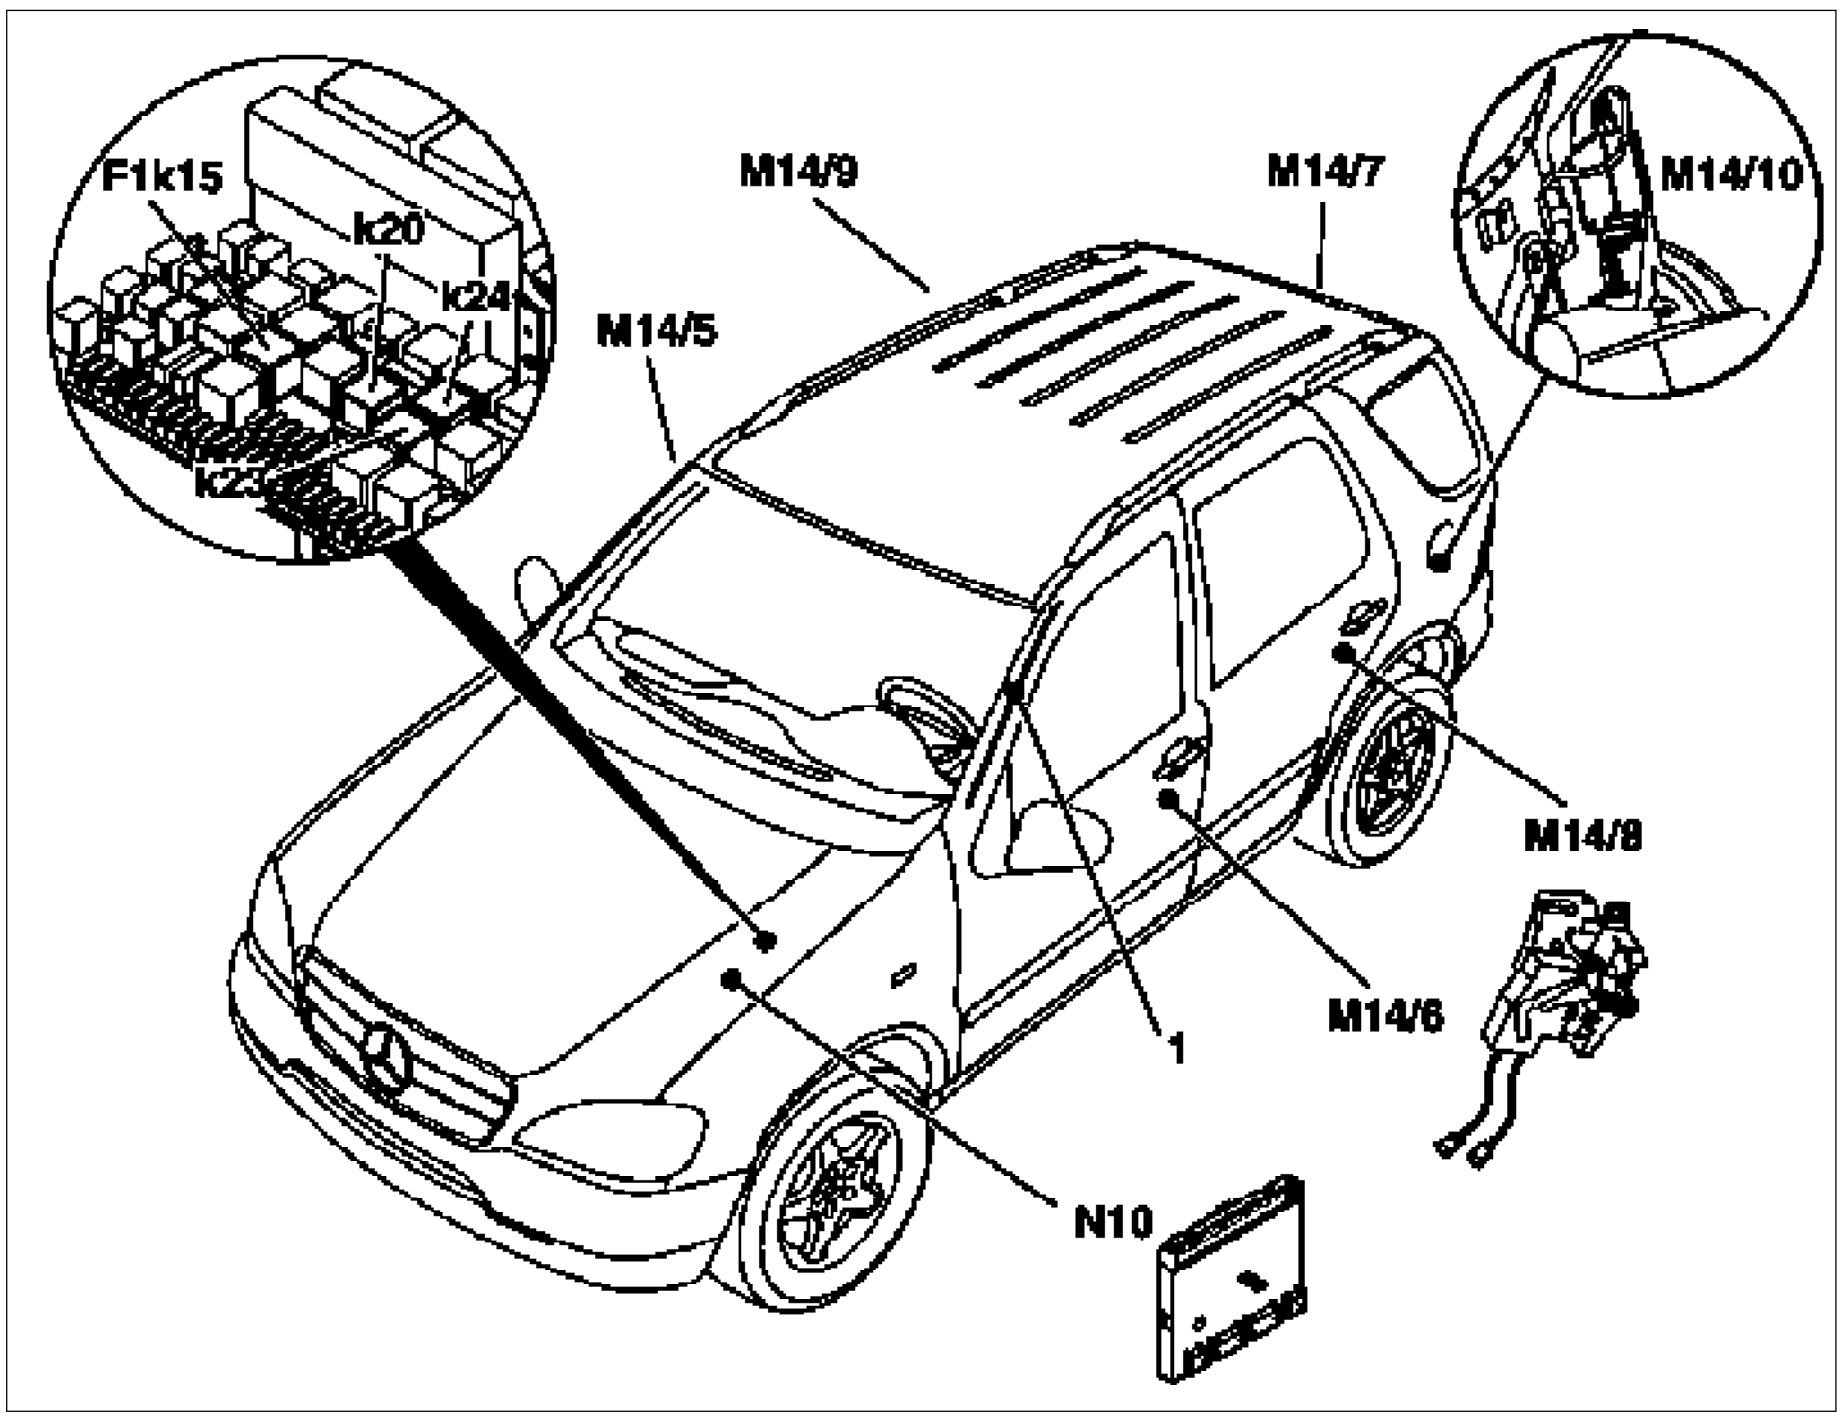

P80.20-0522-06

